
Installation Instructions

Lace Up Kellum Grip

To Install the Kellum Grip:

1. Place the Kellum Grip at the proper location on the cable. Allow a sufficient length of cable to reach the power input when cable hoisting is completed.

2. Identify the first three loop pairs to be laced at the crimped fittings as shown in **Figure 2A**. Make sure the loops are not tangled. It is important that the loop pairs are correctly matched to ensure maximum gripping strength. Then tape both crimped fittings to the cable as shown in **Figure 2B**. This will align the loop pairs of the hoisting grip and aid in lacing.

 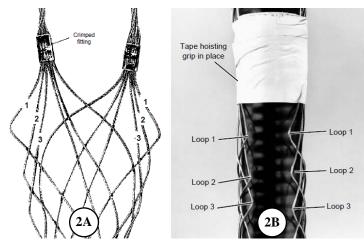


3. Fold the lace in half to form a crease at the center. Starting at the top, pass the lace through the first loop pair so that the crease is between them as shown in **Figure 3A**. Cross the lace ends and pass them through the second loop pair from the underside and pull at right angles in the same way as lacing a shoe (see Figure 3B).





4. Continue lacing so that the seam is straight and the lace is pulled so that the space between both sides of the seam is no greater than the spaces of the mesh next to the loop. See Figure 4. Do not skip any loop



pairs of the grip when lacing; this will weaken the hoisting grip. The grip can be compressed from bottom to top to simplify lacing

5. Tightly twist the lacing together several times at the end of the seam as shown in **Figure 5A**. Wrap the lace around the hoisting grip, twist it together, and thread the remainder of lace through grip as shown in **Figure 5B**. Do not tie knots with the lace because they will not hold!





6. IMPORTANT: First, remove the tape from the tip of the kellum grip. Then, place both hands firmly around the bottom of the grip and slide them upward to the top as shown in **Figure 6**. This pulling action removes slack throughout the grip. Repeat this twice.

7. Attach the hoist line to the grip (**Figure 7**). Tie the cable leader to the hoist line so that the leader does not dangle. Apply tension slowly to the hoist line to allow the kellum grip to tighten uniformly on the cable.

(Maximum 200ft / 60m between kellum grips)

Corporate HeadquartersRosenberger Site Solutions, LLCRosenberger Hochfrequenztechnik GmbH & Co. KG102 Dupont Drive, Lake Charles, LA 70606P.O. Box 1260 D-84526 Tittmoning GermanyPh. 1.866.598.5250 Fax: 337.5983.5290Tel. +49 8684 18-0rlss@rlss.us www.RosenbergerOnline.us

CX064-LUHGSP

Rosenbergei

Rosenberger Site Solutions, LLC

7